



User Instructions

MOD 34



The Modulift Spreader is modular in length. Every spreader consists of 1 pair of End Units & Drop Links, with intermediate struts that can be bolted into the assembly to achieve different spans. The MOD 34 has an assembled span ranging from 1 meters to 10m in 0.5m increments.

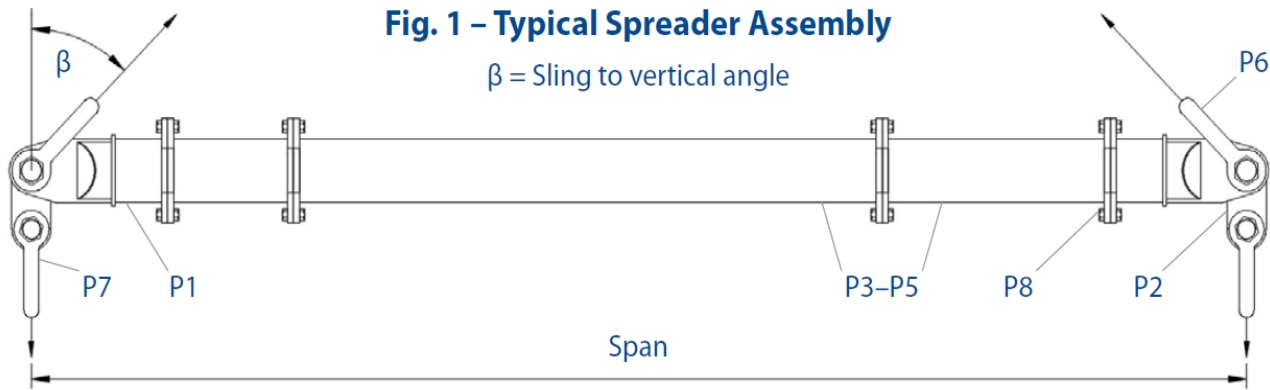


Table 1 – Component List

Part Ref.	Description	Weight/item
P1	End Unit	23kg
P2	Drop Link	7kg
P3	2.0m Strut	51kg
P4	1.0m Strut	31kg
P5	0.5m Strut	20kg
P6	25t Shackle	14kg
P7	17t Shackle	8kg
P8	M20 x 50, Grade 8.8, HT Bolts, Nuts & Washers	

MOD 34

- Rated at 34 tonnes SWL at 6 metres span (30° STV). See load Table for SWL at longer spans.
- ‘Sling to Vertical’ angle, β , 45 degrees or less.
- End Units & Drop Links are rated at 17 tonnes WLL each (34 tonnes combined capacity).
- Bolt tightening torque: 150Nm. Spanner size required: 30mm.
- Recommended additional equipment: Torque Wrench, Podger Spanner and Ring Spanner.


WARNING!

- Personnel using this system should be suitably trained, competent and have a clear understanding of Safe Slings procedures.
- The use of Modulift equipment must be in accordance with the procedures laid down in the ‘Lifting Operations and Lifting Equipment Regulations 1998’ (LOLER).
- NEVER EXCEED STATED SWL - ADHERE TO SWL IN TABLE 2, FOR PARTICULAR SLING ANGLE USED.
- THE TOP SLING LENGTH IS CRITICAL TO THE SAFE USE OF THE SPREADER - ADHERE TO TABLE 2.
- Ensure Drop Links hang down, and smaller shackles are connected to bottom hole of Drop Link
- Do not under any circumstances hang load(s) from the tube or flanges - the spreader is designed for axial compression - not bending.

Table 2 – Load v Span

Span (m)	Sling To Vertical Angle (STV) β						Recommended Configuration EU - End Unit (0.5m)						
	45°		30°		20°								
	SWL (t)	Min. top sling length (m)	SWL (t)	Min. top sling length (m)	SWL (t)	Min. top sling length (m)							
1.0	34	0.6	34	0.8	34	1.3	EU	EU					
1.5	34	0.9	34	1.3	34	2.0	EU	0.5	EU				
2.0	34	1.3	34	1.8	34	2.8	EU	1	EU				
2.5	34	1.6	34	2.3	34	3.5	EU	1	0.5	EU			
3.0	34	2.0	34	2.8	34	4.2	EU	2	EU				
3.5	34	2.3	34	3.3	34	5.0	EU	2	0.5	EU			
4.0	34	2.7	34	3.8	34	5.7	EU	2	1	EU			
4.5	33	3.0	34	4.3	34	6.4	EU	0.5	2	1	EU		
5.0	28	3.4	34	4.8	34	7.2	EU	2	2	EU			
5.5	24	3.7	34	5.3	34	7.9	EU	2	2	0.5	EU		
6.0	20	4.1	34	5.8	34	8.6	EU	2	2	1	EU		
6.5	17	4.4	30	6.3	34	9.3	EU	0.5	2	2	1	EU	
7.0	15	4.8	26	6.8	34	10.1	EU	2	2	2	EU		
7.5	13	5.2	22	7.3	34	10.8	EU	0.5	2	2	2	EU	
8.0	11	5.5	20	7.8	32	11.5	EU	2	2	2	1	EU	
8.5	10	5.9	17	8.3	27	12.3	EU	2	2	2	1	0.5	EU
9.0	8	6.2	15	8.8	24	13.0	EU	2	2	2	2	EU	
9.5	7	6.6	13	9.3	21	13.7	EU	2	2	2	2	0.5	EU
10.0	6	6.9	12	9.8	19	14.5	EU	2	2	2	2	1	EU

WARNING!

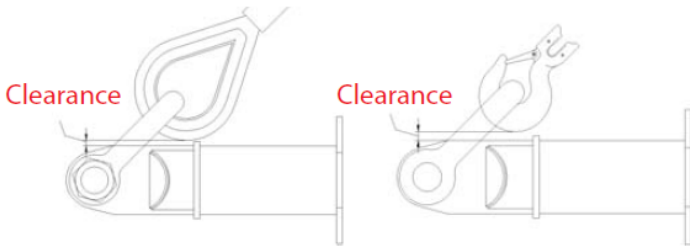

- The rigger must ensure that there is a clearance between the sling end fitting and the end unit as shown above.
- Max number of struts allowed in spreader assembly: 5.
- Assemble longer struts in the centre of the spreader configuration.
- Sling angle is crucial to safe use of spreader.

ASSEMBLY PROCEDURE

1. Check the ID plates on each Modulift component to ensure the correct size is used.
2. Lay out the Struts and End Units in the correct configuration (see table 2), laid on flats to prevent rolling.
3. Check that all pairs of flanges are clear from debris, sand etc. before connection.
4. Bolt the components together using bolts, nuts & washers provided. Tighten the bolts to a torque as shown overleaf, 4 bolts per connection*
5. Place drop link inside the jaw of an end unit, with the larger hole of drop link lined up with the End Unit hole.
6. Place a top sling onto the body of a top shackle, and put jaw of top shackle over the end unit jaw.
7. Put top shackle pin through shackle, end unit jaw and drop link, and repeat for other spreader beam end.
8. Attach free ends of top sling to crane hook.
9. Attach lower slings and shackles to lower holes of drop links, and attach them to the load to be lifted.
10. The assembled spreader beam and lifting rig must be thoroughly checked by a competent person prior to lifting

DO's and DON'TS

- Do ensure to load the spreader through the drop links only. i.e. adhere to Fig.1.
 - Do ensure enough clearance between spreader and the load to prevent the load hitting the spreader. Any collision could cause failure of the spreader.
 - Do not undertake a lift without correct use of appropriate top slings.
 - Do not hang any load from the spreader tube or flanges.
 - Do not exceed stated SWL for that particular span - adhere to table 2
 - Do not rig the lower slings more than 6 degrees from vertical.
 - Do not twist any slings unnecessarily.
- *The number and grade of bolts is critical for the safe use of the spreader particularly at longer spans.